

Product Information

- 1** Camera cleaning pen
- 2** Microfibre cloth
- 3** Triangular cleaning tips
- 4** Circular cleaning tips
- 5** Lens cleaning fluid

- Dimension: L183mm X W81mm X D26mm
- Weight: 118g


Instruction

General information

We recommend the user to clean the digital camera often to maintain optimal performance. Once finished cleaning make sure that all parts are placed back into the case.


Step 1 • Dust cleaning

Take out the cleaning pen and pull open. The brush is on the circular part of the cleaning pen. Push the brush out via the lever. Use the brush to brush away the dust on the digital camera.

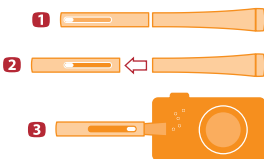


Step 2 • Lens cleaning

Afterwards use the triangular parts circular tip end for lens cleaning. Place 1 drop of lens cleaning fluid on the circular tip and clean the lens in a circular motion. Replace the tip with a refill once it's dirty.

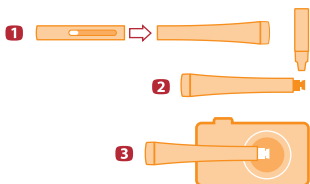

Step 3 • Screen cleaning

Take off the triangular lid to find the triangular tip end used for screen cleaning. Place 1 drop of fluid on the triangular tip and clean the screen in vertical or horizontal strokes. Replace the tip with a refill once it's dirty.

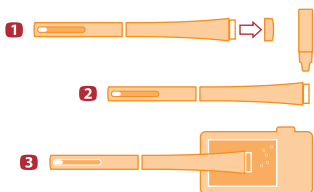

Step 4 • Surface cleaning

Use the microfibre cloth for general surface cleaning. The cloth can also be used for wiping away the moisture from the above cleaning steps.

