MANUAL

CONGRATULATIONS

Congratulations on purchasing your new CTEK professional 24 V DC/DC switch mode battery charger, 12 V converter and battery equalizer. This charger is part of a range of professional battery chargers from CTEK SWEDEN AB. It represents the latest technology in battery charging with charging and analysis in 4 steps with temperature compensation.

Read this User Manual and follow the instructions carefully before using your new charger.

SAFETY

- The charger is designed for 24 V lead-acid batteries mounted into vehicles.
- Do not use the charger for any other purpose
- Use safety glasses when connecting or disconnecting a battery.
- Battery acid is corrosive. Rinse immediately with water if acid comes into contact with skin or eyes. Seek medical advice.
- Make sure that the cables are not being pinched or in contact with warm surfaces or sharp edges.
- While charging, a battery can emit explosive gases, avoid sparks in the immediate area. • Always provide for proper ventilation during charging.
- Avoid covering the charger.

D250TS


The D250TS has one 24 V input and two alternating outputs. One output charge a 24 V battery and the other provides 50 % of the input voltage to the midpoint of a 24 V system. This enables connection of 12 V consumers to the battery string and also equalizing this battery string, for longer battery life.

D250TS

FEATURES:

- Multi-step 10 A temperature compensated battery charging and battery maintenance. Battery separation of Starter and Service batteries.
- Equalization of Service batteries • Makes connection of 12 V consumers directly to 24 V Service battery possible.
- When the charger is correctly connected the charger will output 24 V on the status signal wire. Connection of a 24 V lamp (max 2 W) to the status signal wire will indicate a correctly connected charaer.
- The charger will maintain the starter battery untill the supply is below 14V. To avoid draining the service battery always connect a charger to the service battery when the vehicle is not used for a longer periód.

Service ground Service Battery Midpoint

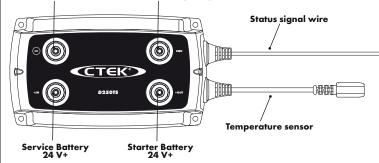

EN • 3

EN

20015884C D250TS, Manual, Print file 002,indd 3


INSTALLATION OF UNIT

- 1. Attach the temperature sensor holder on a flat surface on one Starter battery. Position it as close

- Attach the temperature sensor holder on a tlat surface on one Starter battery. Position it as close as possible to a positive post.
 Use the included drill template. Wiring is simplified if the units are installed according to the drill template, but other setups are possible.
 Install the unit(s) on a flat surface where it can be properly fixed and where the unit is not exposed to fuels, oils or splashes of dirt.
 Mount the unit with screws intended for the surface and attach it with one screw in each of the four holes in the corners of the unit. See picture 1. Mount the unit with M4 or ST4.2 screws. The required torque depends on the surface for mounting.

Service ground Service Battery Midpoint Status signal wire Service Battery 24 V+ Starter Battery 24 V+ 2Nm Temp sensor

DRILL TEMPLATE

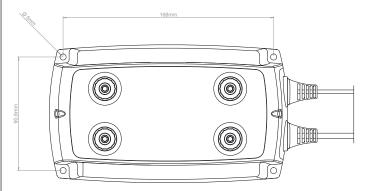


4 • EN

Figure 1

20015884C D250TS, Manual, Print file 002.indd 4

- FUNCTIONALITY
 The D250TS has three operating modes:
 1. 4-step charging of a Starter battery.
 When Starter battery is fully charged: Equalization of a Service battery on the Input side. This function provides the possibility to connect 12 V consumers to the 1st battery in the Service
- battery string. 3. Monitoring. The D250TS now monitors if the Starter battery needs charging (priority) or the Service battery needs equalization.

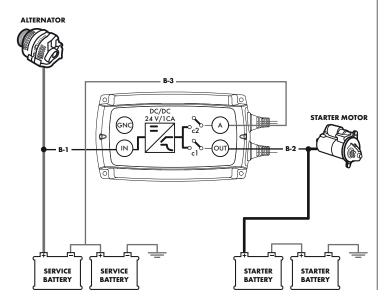


EN

EN • 5

20015884C D250TS, Manual, Print file 002.indd 5

CHARGING PROGRAM D250TS

The D250TS will charge the Starter battery in 4 steps. The last step, Pulse maintenance means that the D250TS monitors the Starter battery to see when a new charge pulse is needed. The D250TS use this monitoring time to equalize the Service battery by sending out a voltage of exactly 50 % of the input voltage. This prolongs the Service battery significantly and will also make it possible to connect 12 V consumers to the first battery in the Service battery string. Equalization ends when the Starter battery needs charging or when the two batteries in the Service battery bank have the same voltage.

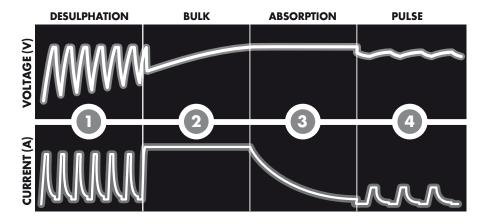

STEP 1 DESULPHATION

Detects sulphated batteries. Pulsing current and voltage, removes sulphate from the lead plates of the battery restoring battery capacity.

STEP 2 BULK

Charging with maximum current until approximately 80 % battery capacity.

STEP 3 ABSORPTION

Charging with declining current to maximize up to 100 % battery capacity.

STEP 4 PULSE

Maintaining the battery at 95–100 % capacity. The charger monitors the battery voltage and gives a pulse when necessary to keep the battery fully charged.

6 • EN

20015884C D250TS, Manual, Print file 002.indd 6

WIRE DIMENSIONS

	MIN WIRE DIMENSIONS				
WIRE	0.5 m	1 m	2 m	5 m	10 m
+IN	2.5 mm ²	2.5 mm ²	4 mm²	4 mm ²	4 mm ²
+OUT	2.5 mm ²	2.5 mm ²	4 mm ²	6 mm ²	6 mm²
+A	2.5 mm ²	2.5 mm ²	4 mm ²	6 mm ²	6 mm²
+SIGNAL	1.5 mm ²				
-GROUND	1.5 mm ²				

TECHNICAL SPECIFICATIONS

Charger model	CTEK D250TS	
Model number	1048	
Input voltage	14-30 V	
Charging voltage	$28.8~{\rm V}$ at $25~{\rm ^{\circ}C}$, temperature compensated. Voltage reduced at higher voltage, increased at lower.	EN
Charging current	10 A	
Equalization current	Max 10 A, average pending time used for Starter battery charging	
Equalization voltage	50 % of input voltage	
Back current drain	<1 Ah/month	
Current ripple	<4 %	
Ambient temperature	-20 $^{\circ}\text{C}$ to +50 $^{\circ}\text{C},$ output power reduced automatically at high temperatures	
Status signal	+24 V ON when D250TS is working properly. Max current 500 mA.	
Battery types	All types of lead-acid batteries (WET, MF, Ca/Ca, AGM and GEL)	
Battery capacity	28-200 Ah	
Dimensions	192 x 110 x 65 mm (L x W x H)	
Insulation class	IP65	
Weight	0.7 kg	

EN • 7

20015884C D250TS, Manual, Print file 002.indd 7

TEMPERATURE PROTECTION

D250TS has a temperature sensor that is used for adjusting the charge voltage according to Starter Battery temperature. This sensor should be attached to the Starter Battery, if possible, otherwise in it close surrounding.

LIMITED WARRANTY

CTEK SWEDEN AB, issues this limited warranty to the original purchaser of this product. This limited warranty is not transferable. The warranty applies to manufacturing faults and material defects for 2 years from the date of purchase. The customer must return the product together with the purchase receipt. This warranty is void if the battery charger has been opened, handled carelessly or repaired by anyone other than CTEK SWEDEN AB or its authorised representatives. One of the screw holes in the bottom of the charger is sealed. Removing or damaging the seal will void the warranty. CTEK SWEDEN AB makes no warranty other than this limited warranty and is not liable for any costs other than those mentioned above. For example, consequential damages are not covered. Moreover, CTEK SWEDEN AB is not obligated to any other warranty other than this warranty.

SUPPORT

CTEK offers professional custom support: **www.ctek.com**. For the latest revised user manual, see www.ctek.com. By e-mail: **info@ctek.se**, by telephone: +46(0) 225 351 80, by fax: +46(0) 225 351 95. By mail: CTEK SWEDEN AB, Rostugnsvägen 3, SE-776 70 VIKMANSHYTTAN, SWEDEN.

VIKMANSHYTTAN, SWEDEN 2011-09-01

Nh+15-5

Bengt Hagander, President CTEK SWEDEN AB

CTEK PRODUCTS ARE PROTECTED BY

Trade marks Patents Designs EP10156636.2 pending RCD 509617 CTM 669987 US12/780968 pending US D575225 CTM 844303 CTM 372715 EP1618643 US D580853 US7541778 US D581356 CTM 3151800 EP1744432 US D571179 CTM 1461716 pending EP1483817 pending RCD 321216 CTM 1025831 SE524203 RCD 000911839 CTM 405811 US7005832B2 RCD 081418 CTM 830545751 pending EP1716626 pending RCD 001119911-0001 CTM 1475420 pending SE526631 RCD 001119911-0002 CTM 1935061 pending RCD 081244 US7638974B2 V28573IP00 EP1903658 pending RCD 321198 CTM 1082141 pending EP09180286.8 pending RCD 321197 CTM 2010004118 pending US12/646405 pending ZL 200830120184.0 CTM 4-2010-500516 pending EP1483818 CTM 410713 ZL 200830120183.6 SE1483818 RCD 001505138-0001 CTM 2010/05152 pending US7629774B2 RCD 000835541-0001 CTM1042686 EP09170640.8 pending RCD 000835541-0002 CTM 766840 pending US12/564360 pending D596126 D596125 SE528232 SE525604 RCD 001705138 pending US D29/378528 pending RCD 201030618223.7 pending US RE42303 US RE42230

8 • EN

20015884C D250TS, Manual, Print file 002.indd 8

2011-12-20 13:27:14

2011-09-19